

# Quick **Start** Guide

## Getting Started

This Quick Start Guide shows how to get **MIRA LITE™** up and running fast on your **LOKUMA** OSP 200 or 300 Control



- Contact [licensing@dataZenEngineering.com](mailto:licensing@dataZenEngineering.com) for annual license pricing and instructions
- Download MIRA LITE User Guide on the [dataZenengineering.com](http://dataZenengineering.com) website for more detailed installation instructions

dataZen Engineering  
5W Hargett St, Suite 200, Raleigh, NC 27601 USA  
[Support@dataZenEngineering.com](mailto:Support@dataZenEngineering.com)

## Step 1

Download MIRA LITE from [dataZenEngineering.com](http://dataZenEngineering.com) to a flash drive.



MIRA LITE Installer

125 MB

## Step 2

Insert flash drive into USB port on front of OSP control



- THINC API Version 1.15.0.0 or above must be installed and running
- API icon in screen tray on OSP control must be **green** before continuing



## Step 3

- **Launch** Windows Explorer
- **Navigate** to USB disk drive where “MIRA LITE” is located
- **Click** “MIRA LITE Setup” compressed folder
- **Click** “MIRA LITE Setup” folder
- **Click** “Setup.exe” to begin the install
- **Click** “Install” for any required items shown on Installation Wizard screen
- **Continue** to follow the installation screen directions to complete the install  
*(Note: Installation can take several minutes)*
- **Click** “Finish” upon completion of installation
- **Recycle** OSP control by pressing the RED button  to shut down and then WHITE button  to restart on NC panel
- **Launch** MIRA LITE using the quick start icon on the OSP control toolbar after API icon is **green**



Finished